
SPON

INTELLIGENT EQUALIZE SOUND SPEAKER


Installation Manual

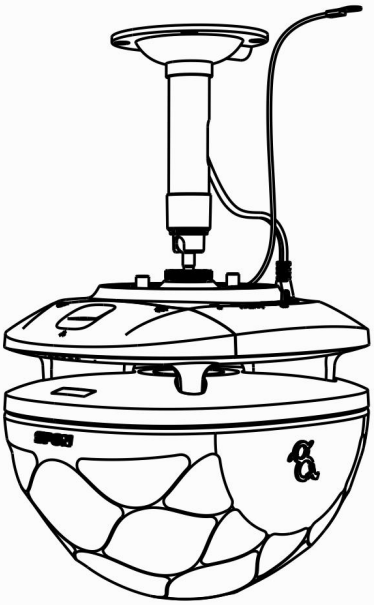

IP NETWORK PUBLIC ADDRESS SYSTEM

Interface Description

Front

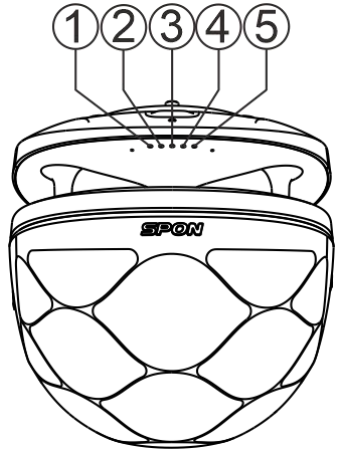

①Microphone 1 status indicator light


②Bluetooth status indicator light

③Working status indicator light

④Fault status indicator light

⑤Microphone 1 Status indicator light: Reserved.

Bottom

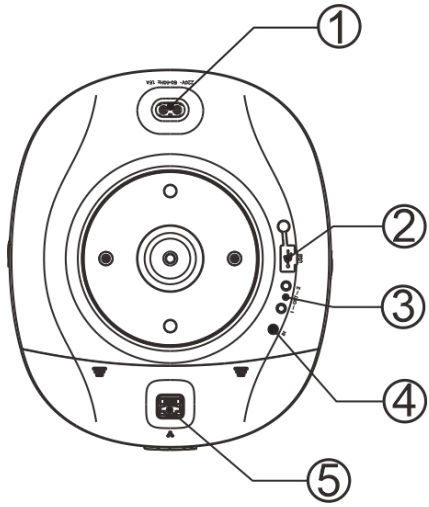

①Power input interface


②USB 2.0 interface

③2-way line output interface

④Line input interface


⑤Network interface

Wiring

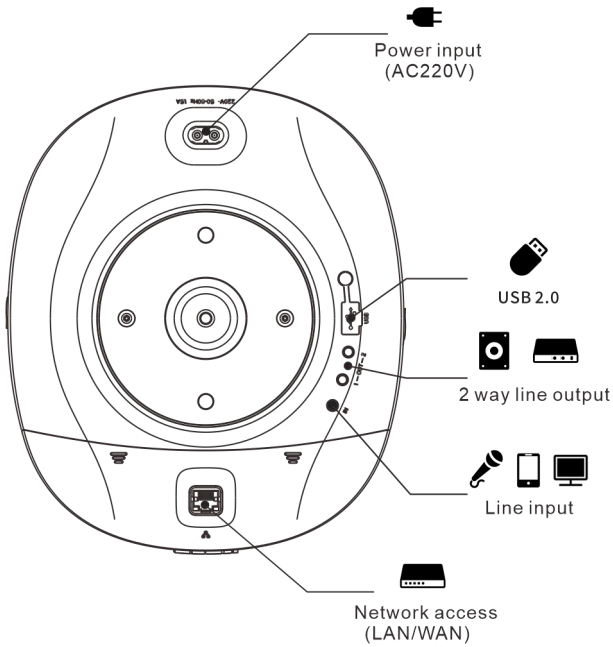


Installation Diagram

Step 1:Install Bracket

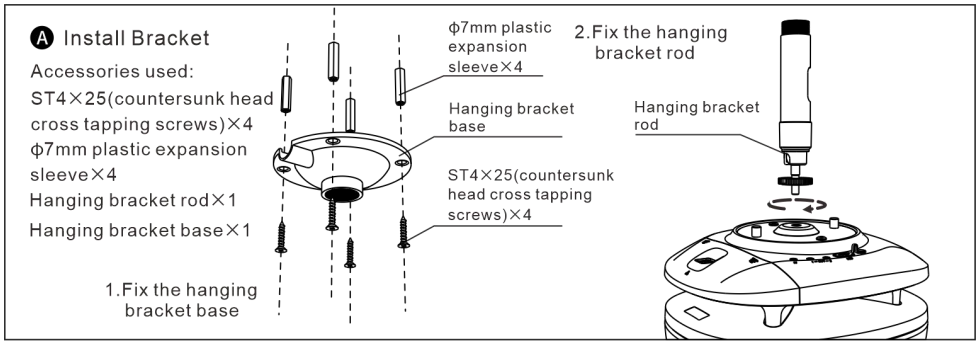


Step 2: Install Product

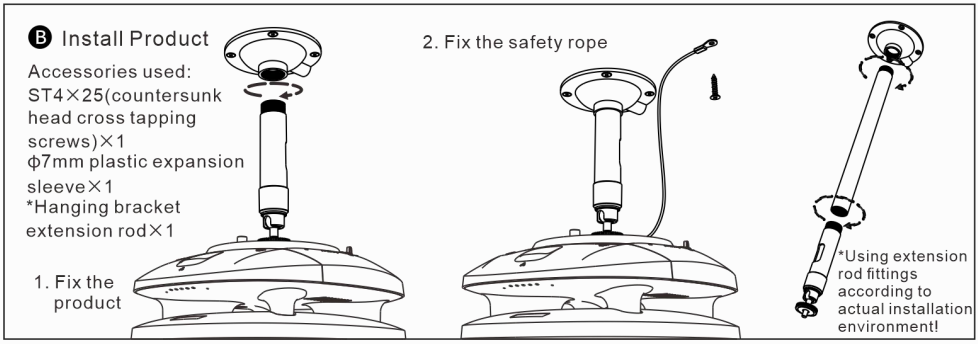

Specification, Functional Parts and Parameters

Power	AC100-240V 50-60Hz
Speaker Unit	Bass 2"×8, Treble 0.75"×2
Frequency Range	100Hz-16KHz
Sensitivity(1m/W)	86dB(±6dB)
Maximum sound pressure level(1m)	100dB±3dB
THD (total harmonic distortion)	<0.5%
Power amplifier output power	Treble 30W, Bass 120W
Standby power consumption	≦7W
Operating temperature, operating humidity	0°C-55°C，10%-90%RH(no condensing)
Dimension(L×W×H)	235X200X204mm(without bracket)

Packing List

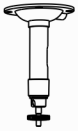
Extendable hanging bracket 1pcs


1.2 meter Power cord 1pcs **(Optional)**


Countersunk head cross tapping screws 6pcs(ST4*25)


Safety rope 1pcs (Ø1.5X600mm)


Plastic expansion sleeve 6pcs(Ø7X28)


Quick installation manual 1pcs


Certification 1pcs

SPON Communications Co., Ltd.
www.sponcomm.com
Service Hotline: +86-731-85570190
Reserve the amendment right without notice

V1. 0B240604